

100mm

**brennenstuhl®**

**DE Bedienungsanleitung**

PB10k CC



58mm

**DE Bedienungsanleitung**

Vielen Dank, dass Sie sich für die Power Bank PB10k CC entschieden haben. Um eine optimale Leistung und Sicherheit bei der Verwendung dieses Produkts zu gewährleisten, lesen Sie bitte diese Anweisungen sorgfältig durch, bevor Sie das Produkt in Betrieb nehmen. Bewahren Sie diese Anleitung zum späteren Nachschlagen auf.

**Technische Daten**

Typ C1 Eingang:  
5V/3A (15W), 9V/3A (27W), 12V/2,92A(35W), 15V/2,33A (35W), 20V/1,75A (35W Max)

Typ C2 Kabeingang:  
5V/3A (15W), 9V/3A (27W), 12V/2,92A(35W), 15V/2,33A (35W), 20V/1,75A (35W Max)

Typ C1 Ausgang:  
5V/3A (15W), 9V/3A (27W), 12V/2,92A (35W), 15V/2,33A (35W), 20V/1,75A (35W Max)

Typ C2 Kabelausgang:  
5V/3A (15W), 9V/3A (27W), 12V/2,92A (35W), 15V/2,33A (35W), 20V/1,75A (35W Max)


Typ C1 + Typ C2 Kabelausgang:  
15W

Kapazität: 7,4V / 5000mAh / 37Wh

Enthaltene Akkuzellen: 5000mAh; 2 x 3,7V


Maße: 90,5 x 61,6 x 30,5mm

**Aufbau des Produkts**

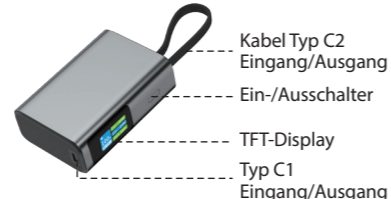


Einschalten: Drücken Sie den Ein-/Ausschalter, das TFT-Display leuchtet.


**Bildschirmanzeige**

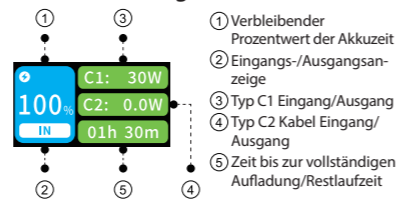

Drücken Sie einmal auf den Ein-/Ausschalter, um das Display einzuschalten oder zwischen den Seiten zu wechseln.



Drücken Sie auf der Hauptseite oder Informationsseite zweimal den Ein-/Ausschalter, um es auszuschalten.

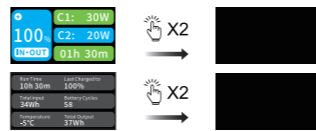


Halten Sie auf der Einstellungsseite „Auto Screen Off“ (Automatische Bildschirmabschaltung) den Ein-/Ausschalter 2 Sekunden lang gedrückt, um zwischen den Optionen zu wechseln.




**Display-Anzeige**


Anzeige für Typ C1 Eingang:




Anzeige für Typ C2 Kabelausgang:




Anzeige für Typ C1 Ausgang:



Anzeige für Typ C2 Kabelausgang:



Anzeige für Typ C1 Eingang & Typ C2 Kabelausgang:



Drücken Sie lange auf den Ein-/Ausschalter, um die Anzeigzeit des Bildschirms zu ändern:




**Maximale Stromverteilung**



Tipp: Laden Sie das Gerät auf, wenn der Akkustand unter 20 % liegt. Dieses Produkt verfügt über einen Überladeschutz, der den Akku vor Schäden durch Überladen schützt.

**Anleitung zum Aufladen**

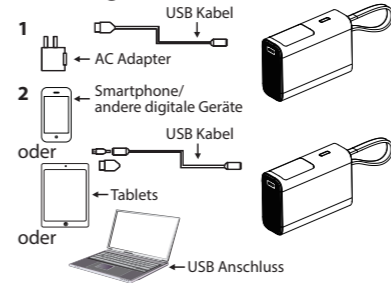

**Achtung:** Wenn beim Drücken des Ein-/Ausschalters keine Reaktion erfolgt, laden Sie das Produkt bitte unverzüglich auf.

**Wichtig:** Bitte schalten Sie das Gerät ein, bevor Sie andere Geräte aufladen. Laden Sie das Gerät mindestens einmal alle drei Monate auf, um mögliche Schäden an den Akkuzellen der Powerbank zu vermeiden.

**Hinweise zum Produkt**

Werfen Sie die Powerbank NICHT ins Feuer. Zerlegen, öffnen, zerdrücken, verbiegen, verformen, durchstechen, zerreißen oder tauchen Sie die Powerbank NICHT unter Wasser. Versuchen Sie NICHT, dieses Produkt mit Geräten oder Wärmequellen wie einem Föhn

oder einer Mikrowelle zu trocknen. Kinder sollten bei der Verwendung dieses Produkts beaufsichtigt werden. Achten Sie darauf, dass diese tragbare Powerbank nicht herunterfällt, insbesondere nicht auf harte Oberflächen.

**Entsorgung**  
Bitte beachten Sie die beim Produkt beigelegten Informationen zum Elektro- und Elektronikgerätegesetz 3 – ElektroG3. Diese finden Sie auch auf unserer Homepage, service.brennenstuhl.com

**Batterien und Akkus dürfen nicht in den Hausmüll!**  
Als Verbraucher sind Sie gesetzlich verpflichtet, alle Batterien und Akkus bei einer Sammelstelle in Ihrer Gemeinde/Ihrem Stadtteil oder im Handel abzugeben, damit sie einer umweltschonenden Entsorgung zugeführt werden können, ansonsten bestehen mögliche Gefahren für die Umwelt und die menschliche Gesundheit.

**CE EU-Konformitätserklärung**  
Die EU-Konformitätserklärung ist beim Hersteller hinterlegt.

**Hugo Brennenstuhl GmbH & Co. KG**  
Seestr. 1-3 · D-72074 Tübingen  
H. Brennenstuhl S.A.S.  
4 rue de Bruxelles · F-67170 Bernolsheim  
lectra technik ag  
Blegistrasse 13 · CH-6340 Baar  
Brennenstuhl UK Ltd.  
No 1 Royal Exchange · London EC3V 3DG, UK  
www.brennenstuhl.com  
service.brennenstuhl.com  
0534937/926

100mm

**brennenstuhl®**

**EN User Manual**  
PB10k CC



58mm

**EN User Manual**

Thank you for purchasing Power Bank PB10k CC. For optimum performance and safety of using this product, please read these instructions carefully before operating the product. Please keep this manual for future reference.

**Product Specifications**

Type-C1 Input:  
5V/3A (15W), 9V/3A (27W), 12V/2.92A(35W), 15V/2.33A (35W), 20V/1.75A (35W Max)

Type-C2 Cable Input:  
5V/3A (15W), 9V/3A (27W), 12V/2.92A(35W), 15V/2.33A (35W), 20V/1.75A (35W Max)


Type-C1 Output:  
5V/3A (15W), 9V/3A (27W), 12V/2.92A (35W), 15V/2.33A (35W), 20V/1.75A (35W Max)

Type-C2 Cable Output:  
5V/3A (15W), 9V/3A (27W), 12V/2.92A (35W), 15V/2.33A (35W), 20V/1.75A (35W Max)

Type-C1 + Type-C2 Cable Output:  
15W


Capacity: 7.4V / 5000mAh / 37Wh  
Cells inside: 5000mAh; 2 x 3.7V  
Size: 90.5 x 61.6 x 30.5mm

**Product Structure Drawing**

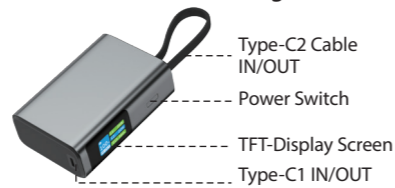


Power Switch: Press power switch button, TFT screen is lit.

**Screen Display Guide**

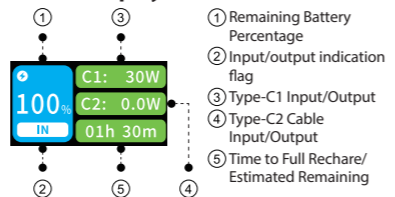

Press the power button once to turn on the screen or switch between pages.



On the main page or information page, press the button twice on the standalone device to turn off the Power.



On the "Auto Screen Off" settings page, press and hold the power button for 2 seconds to toggle between options.



**Display Illustration**

Display Screen for Type-C1 Input:



Display Screen for Type-C2 Cable Input:



Display Screen for Type-C1 Input & Type-C2 Cable Output:



Long-press the power button to switch the screen display time:



**Maximum Power Distribution**

Single-Port Output




Two-Port Output



Tip: Please charge the device when the battery level is below 20%. This product has safety protection that prevent the battery from damages when over charging.

**Charging Instruction**

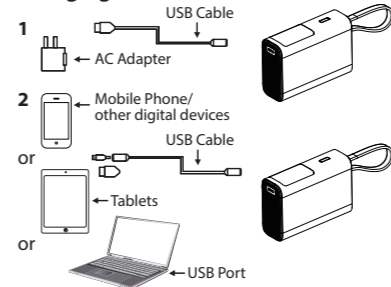

**Caution:** If there is no response when touching the power on/off button, please charge the product immediately.

**Important:** Please turn on the power before charging other devices. Please charge the device at least once every 3 months to avoid the potential damage of battery cells in the power bank. Please contact your local recycling center for proper way to discard your used device in accordance with local regulations.

**Product Information**

DO NOT throw the power bank into the fire. DO NOT disassemble, open, crush, bend, deform, puncture, shred or submerge the power bank.

DO NOT attempt to dry up this device with any appliance or heat sources, such as hair dryer or microwave oven. Children should be supervised when using this device. Avoid dropping this portable power bank, especially on hard surfaces.

**Disposal**  
Dispose of electrical appliances in an environmentally friendly manner! Electrical appliances should not be disposed of with household waste!

In accordance with European Directive 2012/19/EU on waste electrical and electronic equipment, used electrical appliances must be collected separately and recycled in an environmentally friendly manner. You can find out how to dispose of your old appliance from your local authority.

**Batteries and accumulators must not be disposed of in the household waste!**

As a consumer, you are legally obliged to hand in all batteries and accumulators at a collection point in your community/urban district or in the trade, so that they can be disposed of in an environmentally friendly manner, otherwise there are possible risks to the environment and human health.

**CE EU Declaration of Conformity**  
The declaration of conformity is deposited with the manufacturer.

**UK CA UKCA Declaration of Conformity**  
The declaration of conformity is deposited with the manufacturer.



- FR** Scannez pour obtenir le mode d'emploi
- NL** Scan voor gebruiksaanwijzing
- SE** Skanna för bruksanvisning
- ES** Escanear para obtener el manual de instrucciones
- PL** Aby uzyskać instrukcję obsługi, zeskanuj kod
- IT** Scansionare per istruzioni